

2014 DDX5901HD Custom Opening Screen Image




This feature allows retailers to add a custom OEM or Company image to the startup screen of the DNX receiver. This can be beneficial for advertising and expediter business.

Step 1 – Edit Custom Image using the computer

To create the image, use image editing software that allows for a 16-Bit BMP file version. Programs like Photoshop or Pixelformer work best. Size the image to 800 x 480 and export it as a BMP file. Depending on the program you will need to go into the advanced settings and change the BMP file to 16-bit. with the RGB settings set to **R5 G6 B5**.

For DDX5901 the “OpeningCustomize.txt” file must also be placed on the USB drive. And the image file name being used must be place within the OpeningCustomize.txt file; See example highlighted in blue. After changing the file name in the OpeningCustomize.txt, click File and Save. Once all steps are completed, place both files on a blank USB flash drive and plug it into the USB of the Kenwood DDX

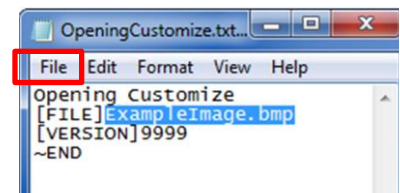

Step 2 – Enter the background change menu

Press and Hold the Eject and AV buttons then reset the receiver. Let go of the reset, but continue holding the Eject and AV buttons until the screen turns on and the Custom Mode appears. Press the Opening Customize icon.



Step 3 – Finish

When done properly the DDX will display “Customize OK”. Press the Exit icon and Boot Screen Customize is complete.

